Primerdesign

R01301

# **Crimean-Congo Haemorrhagic Fever Virus**

Kit version: 2

## **Target region:**

nucleocapsid gene

## genesig® Standard RNA Kit

150 tests

GENESIG

Kits by Primerdesign

For general laboratory and research use only

## **Product Description**

This genesig® Standard qPCR detection kit targets the nucleocapsid gene from Crimean-Congo haemorrhagic fever virus which is commonly known as CCHFV. CCHFV is an RNA virus which primarily infects ticks of the Hyalomma genus, which act as both vectors and reservoirs for the virus. The virus can also infect humans, domestic livestock and wild animals. Infection can lead to Crimean-Congo haemorrhagic fever. The species is divided into seven clades: Clade I (Africa 2), Clade II (Africa 1), Clade III (Europe 2), Clade IV (Africa 3), Clade V (Europe 1), Clade VI (Asia 1) and Clade VII (Asia 2), of which all are predicted to be detected by this qPCR assay.

## **Specificity**

The kit is designed for the in vitro quantification of Crimean-Congo haemorrhagic fever virus genomes and to have a broad detection profile. Specifically, the primers will detect over 95% of sequences available on the NCBI database at the time of last review.

Due to the complexity, there may be a reduced performance of the assay in the presence of Clade III and Clade VII.

The dynamics of genetic variation mean that new sequence information may become available after the most recent review. If you require further information or have a specific question about the detection profile of this kit then please send an e-mail to <a href="mailto:techsupport@primerdesign.co.uk">techsupport@primerdesign.co.uk</a> and our team will answer your question.

#### Kit contents

| Quantity | Component  | Tube    | Cap Colour |
|----------|--|---------|------------|
| 1        | CCHFV_v2.0 primer/probe mix (150 reactions) FAM labelled   | 200     | BROWN      |
| 1        | CCHFV_v2.0 positive control template   | 7111 P  | RED        |
| 1        | RNase/DNase free water for resuspension of primer/probe mixes  | N. H.   | WHITE      |
| 2        | Template preparation buffer for resuspension of positive control template and standard curve preparation | 1,000,0 | YELLOW     |

## Reagents and equipment to be supplied by the user

#### **Real-time PCR Instrument**

#### **Extraction kit**

This kit is recommended for use with genesig® Easy DNA/RNA extraction kit or exsig®Mag. However, it is designed to work well with all processes that yield high-quality nucleic acid with minimal PCR inhibitors.

#### oasig®PLUS OneStep Lyophilised qPCR Master Mix

This kit is intended for use with oasig®PLUS OneStep Lyophilised qPCR Master Mix.

Pipettors and filter tips

Vortex and centrifuge

1.5 ml microtubes

qPCR plates or reaction tubes

## Kit storage and stability

This kit is stable for shipping at ambient temperature but should be stored at -20°C upon arrival. Once the lyophilised components have been resuspended, they should not be exposed to temperatures above -20°C for longer than 30 minutes at a time and unnecessary repeated freeze/thawing should be avoided. The kit is stable for six months from the date of resuspension under these circumstances.

If a standard curve dilution series is prepared this can be stored frozen for an extended period. If you see any degradation in this serial dilution a fresh standard curve can be prepared from the positive control.

Primer Design Ltd does not recommend using the kit after the expiry date stated on the pack.

## Suitable sample material

This kit can be used with all types of samples from various origins. Please ensure that the extracted nucleic acid samples are suitable in terms of purity, concentration, and RNA integrity.

## **Dynamic range of test**

Under optimal PCR conditions the kit can achieve priming efficiencies between 90-110% and detect less than 100 copies of target template. If running a positive control standard curve for a quantitative result, and an efficiency of between 90% to 110% is not achieved, then the run should be repeated with a freshly prepared standard curve.

## Principles of the test

#### **Real-time PCR**

A target specific primer/probe mix is provided, and this can be detected through the FAM channel.

The primer/probe mix provided exploits with the so-called TaqMan® principle. During PCR amplification, forward and reverse primers hybridize to the target cDNA. A fluorogenic probe is included in the same reaction mixture which consists of a DNA probe labelled with a 5'-dye and a 3'-quencher. During PCR amplification, the probe is cleaved, and the reporter dye and quencher are separated. The resulting increase in fluorescence can be detected on a range of qPCR platforms.

#### **Positive control**

For copy number determination and as a positive control for the PCR set-up, the kit contains a positive control template. This can be used to generate a standard curve of the target copy number/Cq value. Alternatively, the positive control can be used at a single dilution where full quantitative analysis of the samples is not required. Each time the kit is used, at least one positive control reaction must be included in the run. A positive result indicates that the primers/probes for detecting the target gene worked properly in that particular experimental scenario. If a negative result is obtained the test results are invalid and must be repeated. Care should be taken to ensure that the positive control does not contaminate any other kit component which would lead to false-positive results. This can be achieved by handling this component in a Post PCR environment. Care should also be taken to avoid cross-contamination of other samples when adding the positive control to the run. This can be avoided by sealing all other samples and negative controls before pipetting the positive control into the positive control well.

#### **Negative control**

To validate any positive findings a negative control reaction should be included every time the kit is used. For this reaction, RNase/DNase-free water should be used instead of the template. A negative result indicates that the reagents have not become contaminated while setting up the run.

## **Resuspension Protocol**

To minimise the risk of contamination with foreign RNA/DNA, we recommend that all pipetting is performed in a PCR clean environment. Ideally, this would be a designated PCR lab or PCR cabinet. Filter tips are recommended for all pipetting steps.

- 1. Pulse-spin each tube in a centrifuge before opening.
  - This will ensure that the lyophilised primer/probe mix or template is in the base of the tube and is not lost upon opening the tube.
- 2. Resuspend the kit components in the RNase/DNase-free water supplied, according to the table below.

To ensure complete resuspension allow primer/probe mix to rehydrate for 10 minutes at room temperature. Vortex each tube thoroughly, followed by pipetting up and down 10 times. Failure to mix well can produce poor kit performance.

| Component - resuspend in water Volu |        |
|-------------------------------------|--------|
| Pre-PCR pack                        |        |
| CCHFV_v2.0 primer/probe mix (BROWN) | 165 µl |

3. Resuspend the positive control template in the template preparation buffer supplied, according to the table below:

To ensure complete resuspension, vortex the tube thoroughly.

| Component - resuspend in template preparation buffer Volu |        |  |
|---|--------|--|
| Post-PCR heat-sealed foil                                 |        |  |
| CCHFV v2.0 Positive Control Template (RED) *              | 500 µl |  |

<sup>\*</sup> This component contains a high copy number template and is a VERY significant contamination risk. It must be opened and handled in a separate laboratory environment, away from the other components.

## OneStep RT-qPCR detection protocol

#### For optimum performance and sensitivity.

All pipetting steps and experimental plate set up should be performed on ice. After the plate is prepared proceed immediately to the OneStep RT-qPCR amplification protocol. Prolonged incubation of reaction mixes at room temperature can lead to PCR artifacts that reduce the sensitivity of detection.

1. For each RNA sample prepare a reaction mix according to the table below: Include sufficient reactions for positive and negative controls.

| Component   | Volume |  |
|---|--------|--|
| oasig®PLUS OneStep Lyophilised qPCR Master Mix (GOLD) | 10 µl  |  |
| CCHFV_v2.0 primer/probe mix (BROWN)                   |        |  |
| RNase/DNase-free water (WHITE)                        |        |  |
| Final Volume  |        |  |

- 2. Pipette 15  $\mu$ I of this mix into each well according to your qPCR experimental plate set-up.
- 3. Pipette 5  $\mu$ I of RNA template into each well, according to your experimental plate set up.

For negative control wells use 5  $\mu$ l of RNase/DNase free water (WHITE). For positive control wells use 5  $\mu$ l of the positive control template (RED). The final volume in each well is 20  $\mu$ l.

#### 4. (Optional) Standard curve preparation for quantitative analysis.

For quantitative analysis of the samples, a standard curve dilution series can be prepared using the positive control template (**RED**). This is not required for qualitative analysis.

#### 4.1 Reaction mix preparation for the standard curve.

Include sufficient reactions for each dilution of the standard curve.

| Component   | Volume |
|---|--------|
| oasig®PLUS OneStep Lyophilised qPCR Master Mix (GOLD) | 10 µl  |
| CCHFV_v2.0 primer/probe mix (BROWN)                   | 1 µl   |
| RNase/DNase-free water (WHITE)                        | 4 µl   |
| Final Volume  | 15 µl  |

#### 4.2 Preparation of a 10-fold standard curve dilution series.

- **a.** Pipette 90 μl of template preparation buffer (YELLOW) into 5 tubes and label them 2-6. The neat positive control tube (RED) is considered tube 1.
- b. Pipette 10 µl of positive control template (RED) into tube 2.
- **c.** Vortex thoroughly.
- **d.** Change pipette tip and pipette 10  $\mu$ I from tube 2 into tube 3.
- **e.** Vortex thoroughly.

Repeat steps **d** and **e** across the tubes to complete the dilution series.

| Standard Curve                | Copy Number                |
|-------------------------------|----------------------------|
| Tube 1 Positive control (RED) | 2 x 10⁵ per µl             |
| Tube 2                        | 2 x 10⁴ per µl             |
| Tube 3                        | 2 x 10 <sup>3</sup> per µl |
| Tube 4                        | 2 x 10 <sup>2</sup> per μl |
| Tube 5                        | 20 per μl                  |
| Tube 6                        | 2 per µl                   |

## 4.3 Pipette 15 $\mu$ I of reaction mix and 5 $\mu$ I of the respective standard into each well for the standard curve according to your plate set up.

The final volume in each well is 20 µl.

## **OneStep RT-qPCR Amplification Protocol**

Amplification conditions using oasig®PLUS OneStep Lyophilised qPCR Master Mix.

|             | Step                  | Time   | Temp  |
|-------------|-----------------------|--------|-------|
|             | Reverse Transcription | 10 min | 55 °C |
|             | Enzyme activation     | 2 min  | 95 °C |
|             | Denaturation          | 10 s   | 95 °C |
| Cycling x50 | DATA COLLECTION *     | 60 s   | 60 °C |


<sup>\*</sup> Fluorogenic data should be collected during this step through the FAM channels

## Interpretation of results


| Target | Positive control | Negative<br>control | Interpretation                                     |
|--------|------------------|---------------------|--|
| +      | +                | -                   | POSITIVE QUANTITATIVE RESULT calculate copy number |
| -      | +                | -                   | NEGATIVE RESULT                                    |
| +/-    | +                | ≤ 35                | EXPERIMENT FAILED due to test contamination        |
| +/-    | +                | > 35                | *  |
| +/-    | -                | +/-                 | EXPERIMENT FAILED                                  |

A positive control template is expected to amplify between Cq 16 and 23. Failure to satisfy this quality control criterion is a strong indication that the experiment has been compromised.

\*Where the test sample is positive and the negative control is positive with a Cq > 35, the sample must be reinterpreted based on the relative signal strength of the two results:

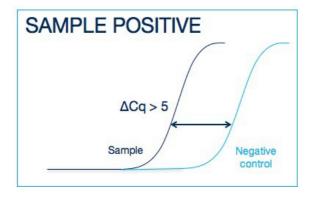

If the sample amplifies > 5 Cq earlier than the negative control, then the sample should be reinterpreted (via the table above) with the negative control verified as negative.

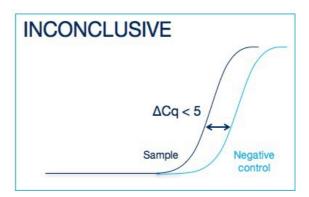

If the sample amplifies < 5 Cq earlier than the negative control, then the positive sample result is invalidated, and the result should be determined inconclusive due to test contamination. The test for this sample should be repeated.

#### **Notices and disclaimers**

This product is developed, designed and sold for research purposes only. It is not intended for human diagnostic or drug purposes or to be administered to humans unless clearly expressed for that purpose by the Food and Drug Administration in the USA or the appropriate regulatory authorities in the country of use. During the warranty period, Primer Design Ltd genesig® detection kits allow precise and reproducible data recovery combined with excellent sensitivity. For data obtained by violation of the general GLP guidelines and the manufacturer's recommendations the right to claim under guarantee is expired. PCR is a proprietary technology covered by the several US and foreign patents. These patents are owned by Roche Molecular Systems Inc. and have been sub-licensed by PE Corporation in certain fields. Depending on your specific application you may need a license from Roche or PE to practice PCR. Additional information on purchasing licenses to practise the PCR process may be obtained by contacting the Director of Licensing at Roche Molecular Systems, 1145 Atlantic Avenue, Alameda, CA 94501 or Applied Biosystems business group of the Applera Corporation, 850 Lincoln Centre Drive, Foster City, CA 94404. In addition, the 5' nuclease assay and other homogeneous amplification methods used in connection with the PCR process may be covered by US Patents 5,210,015 and 5,487,972, owned by Roche Molecular Systems, Inc, and by U.S. Patent 5,538,848, owned by The Perkin-Elmer Corporation.

#### **Trademarks**

genesig® is a registered trademark of Primer Design Ltd. oasig® is a trademark of Primer Design Ltd. exsig®Mag is a trademark of Primer Design Ltd.

The PCR process is covered by US Patents 4,683,195, and 4,683,202 and foreign equivalents owned by Hoffmann-La Roche AG. TaqMan® is a registered trademark of Roche Molecular Systems, Inc., The purchase of the Primer Design Ltd reagents cannot be construed as an authorisation or implicit license to practice PCR under any patents held by Hoffmann-LaRoche Inc.